 
 
 


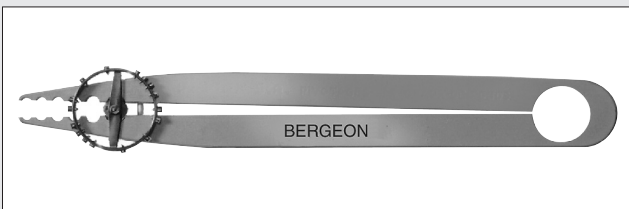

N°		←→	↑↓
7825	<p>Brucelles aux barrettes, permettant d'enlever un bracelet de sa boîte</p> <p>Federsteg-Kornzange, ermöglicht das Abnehmen des Armbandes vom Gehäuse</p> <p>Spring bar tweezers, allows to take off the bracelet from the watchcase</p> <p>Brucelas para barritas, permiten de quitar la pulsera de la caja del reloj</p>	110 mm	10 mm

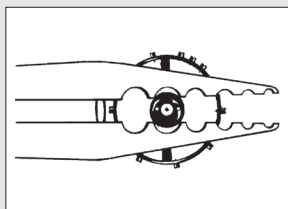

N°		←→	↑↓
4852	<p>Brucelles en laiton nickelé pour tourner et enlever les plateaux</p> <p>Vernickeltem Messing Kornzangen um Hebelscheiben zu drehen oder zu entfernen</p> <p>Nickel-plated brass tweezers to turn and remove rollers</p> <p>Pinzas de latón niquelado para girar y sacar platillos</p>	95 mm	10 mm

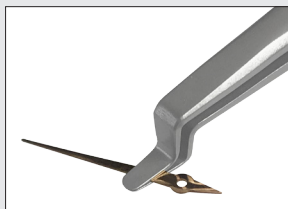

N°		←→	↑↓
7026-PMC-2A	<p>Brucelles coudées (90°) pour poser et enlever les aiguilles. En acier, antimagnétique.</p> <p>Gebogene Kornzange (90°) zum setzen und abheben von Zeigern. Aus Stahl, antimagnetisch.</p> <p>Angled tweezers (90°) for fitting and removing hands. In steel, antimagnetic.</p> <p>Pinzas dobladas (90°) para colocar y quitar agujas. En acero, antimagnéticas.</p>	115 mm	10 mm